


MULTIBAND RADIO

USER MANUAL

PLEASE READ THE MANUAL BEFORE YOUR FIRST USE.

KEEP THIS MANUAL SAFE FOR FUTURE REFERENCE!

PRODUCT DESCRIPTION

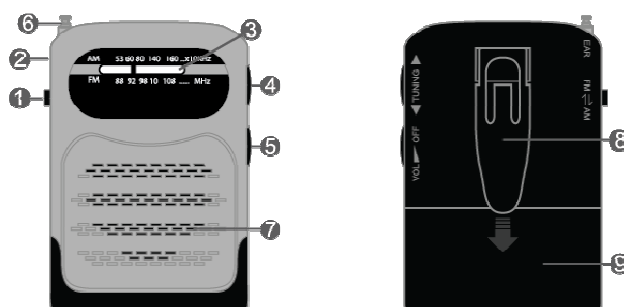


No.	Description	No.	Description
1.	AM/FM band selector	6.	Telescopic antenna
2.	Earphone jack	7.	Speaker
3.	Bands panel	8.	Belt clip
4.	Radio station selector	9.	Battery compartment
5.	Volume adjustment / ON-OFF knob		

OPERATING INSTRUCTIONS

- Use the SW/AM/FM band selector (1) to choose between SW, AM and FM band.
- Turn the Volume adjustment/ON-OFF knob (5) to turn on and set the ideal sound volume.
- Choose your radio station by turning the Radio station selector (4).
- If required, move the telescopic antenna (6) into a different position or move the device to optimise reception of the current station.
- Turn the Volume adjustment/ON-OFF knob (5) to Min position to turn off.

BATTERY INSTALLATION

Purchase 2 AA batteries. After removing the battery compartment cover on the bottom of the product, insert the batteries, making sure the positive (+) and negative (-) terminals are correctly positioned. Replace the battery compartment cover.

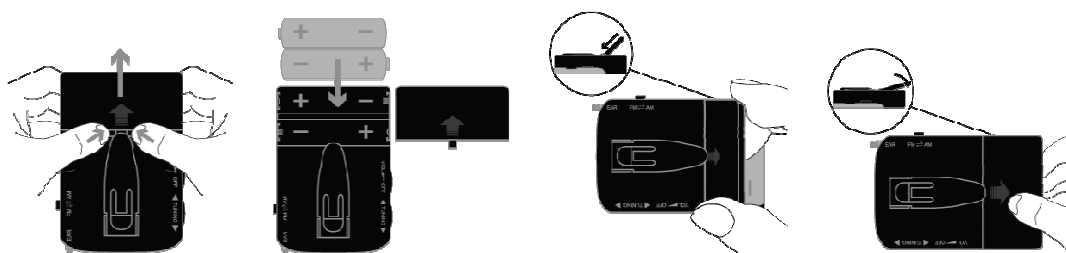

TECHNICAL SPECIFICATIONS

- Battery type: 2 x AA (not supplied), 3V⁻⁻⁻⁻
- Frequency band:

- o FM: 88 – 108 MHz
- o AM: 530 – 1600 KHz

PRECISION AND PRECAUTIONS ABOUT THE BATTERY USE

- Throwing away a used battery in the environment or with household waste pollutes and avoids the recuperation of reusable materials.
- It is important to limit the battery consumption and to respect the following rules:
 - Favor alkaline battery (last longer than saline battery) and when it's possible use rechargeable battery.
 - Leave used batteries and accumulators in adapted containers that you can find in some retailers. In that way, metals don't pollute the environment and the health.
- Battery has to be inserted by respecting the polarity show on the apparel and the battery. An incorrect positioning can damage the apparel, cause leaking and even provoke fire and the explosion of the battery.
- To assure a good functioning, battery has to be in a good condition. If there is a problem, put new battery.
- Never try to recharge battery not made for this. It could leak, warm up, cause fire or explode.
- Replace all the battery at the same time. Never mix up alkaline battery with saline battery.
- Used battery has to be removed.
- Also, remove the battery if you're not using the apparel for a long time.
- Never try to short-circuit the terminal of a battery.
- Never throw away the battery in fire because they can explode.
- Take out the accumulator from the apparel before reload it.
- We recommend that an adult watch if a child change the battery to respect those rules.
- If you swallow a battery, go immediately to your doctor or the hospital.



WARNING: You should not dispose of this device with your household waste.

A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

Marketed by EUROTOS VERSAND GMBH D-40764 LANGENFELD DEUTSCHLAND

Made in PRC

